

Solar PowerBank M5

Device Compatibility Chart

Use the Solar PowerBank **M5** to charge/power most of mobile devices. Only requirement is a USB compatible interface (5V, max. 500mA) to charge/power your device. With a suitable charging cable you can connect your device to the Solar PowerBank **M5**. The accessories include a set of adapters. If there is no proper adapter available ask your local dealer or an electronic specialist shop for a suitable USB charging cable. Customary rechargeable batteries (type AA, AAA) are often used in digital cameras. With an USB battery charger you are able to charge them as well.

The following device compatibility chart shows a range of usual device types/ -models.

Mobile Phone / Smartphone

- Apple
- Blackberry
- LG
- Motorpla
- Nokia
- Palm
- Samsung
- Siemens
- Sony Ericsson

iPod

- iPod since generation 3, iPod shuffle 2, iPod Photo 4 Gen, iPod Touch, iPod Nano 1-4, iPod Mini (USB charging cable)
- iPod Shuffle 1, iPod Video (USB docking station)

MP3- / MP4-Player

- Creative Zen, MuVo
- Archos 105, 40x, 60x
- iRiver
- Microsoft Zune
- Samsung Yepp
- Sandisk Sansa-eSerie, Clip
- Typhoon
- Philips GoGear
- BlueMedia 8260
- Cowon iAudio 7 / U5, A3, D2, D2 DAB
- Sony Walkman mp3
- Yaruko Yump, Yur.Beat
- Teac MP-Serie
- Transcend

PDA / Handheld

- Archos 5
- Palm Zire, Tungsten, T/X
- HP IPaq
- Siemens Loox
- Typhoon MyPhone
- Mio P-Serie
- Yakumo

Navigation / GPS

- Garmin iQue M5, eTrex, GPS-Serie
- TomTom GO-Serie, XL-Serie, ONE-Serie
- Mio Moov-Serie
- Medion GoPal-Serie
- Blaupunkt TravelPilot Easy
- Becker Assist 7xxx, Assist Zxxx only power, loading not possible
- Bluemedia PDA 6280
- Falk
- NaviLock NL-120GR

Digital Camera

- Samsung NV-Serie, i-Serie, L-Serie, M-Serie
- HP PhotoSmart E-Serie, M-Serie, R-Serie
- Creative vado
- Casio V-Serie only with USB station

Games Console

- Nintendo DS/DS Lite, GameBoy Advance SP
- Sony PSP